



### Product Description

- A-Fixing screw
- B-Height adjustment
- C-Regulation valve 130°~ 20°
- D-Regulation valve 20°~ 0°
- F-Fixing screw
- G-Height adjustment screw
- H-Pivot centre

### Adjustment in Cement Box

To adjust the position of floor spring in cement box. (7mm length x10mm width x4mm height) loosen fixing screw (A) and (F).

Move floor spring to required position and use screw (B) and (G) for height adjustment. Retighten screw (A) and (F) after adjustment.

### Centre hung doors

For centre hung doors, floor spring should be in the centre of cement box.

Maximum door opening angle is 130° in each direction.

For doors opening up to 130° door stop MUST be fitted.

Ensure that top centre is properly aligned with floor spring

### Adjustment Of Closing Speed.

Two regulating valves (C) and (D). (↑) decrease closing speed. (↓) increase closing speed.

Valve C: controlled closing range 130° ~ 20°

Valve D: controlled closing range 20° ~ 0°

### Attachment Of Cover Plate

Press Insert piece (1) into gap behind spindle and secure cover plate

(2) to floor spring with fixing 3

- 1-insert place
- 2-Cover plate
- 3-fixing screw M5x6



Silver Mirror



Silver Brush



Black Matt



Gold Mirror